

 
 
Tallis Horizontal Fitting Instructions

Oval Tube Steel Radiator

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.



Drawings

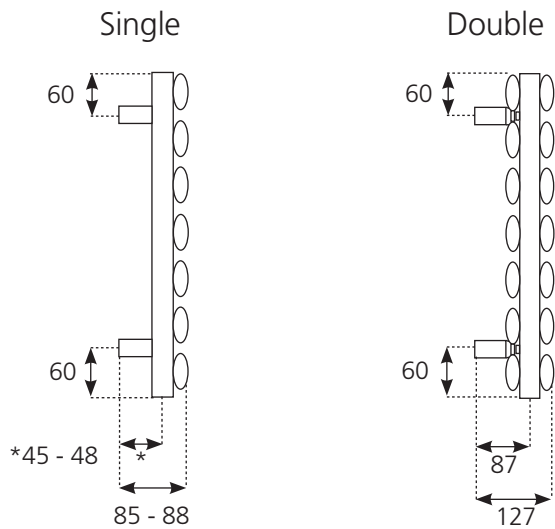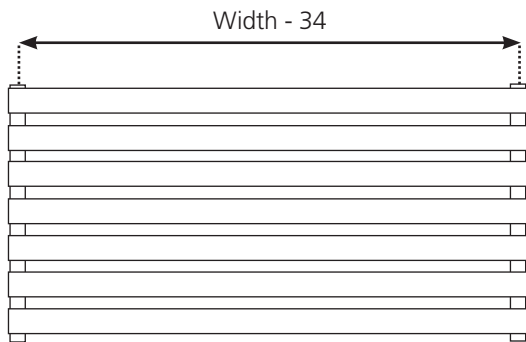

Pipe Centres

	Single	Double
Pipe centres left to right =	width less 34mm	width less 34mm
Pipe centres from wall =	45mm - 48mm	87mm
Depth from wall =	85mm - 88mm	127mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery.

For further information please see terms and conditions at the bottom of the page overleaf.

2. Contents

You should have:

- 1 Radiator
- 4 Wall Brackets
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

The fixing kits (screws and dowels) are suitable for compact walls or hollow bricks. Please ensure suitable fixings are used for the correct wall type.

3. Fix Brackets

PLEASE NOTE:

It is essential that all brackets are level and square prior to hanging the radiator to ensure a vertical alignment for connecting the pipework.

Tallis Single

Firstly screw on the bracket studs to the radiator.

With the bracket studs securely fixed, you may either hold up the radiator to the wall and mark out the bracket sleeve positions, or use the dimensions on the appropriate drawings overleaf.

 
Using a suitable drill bit and plugs, secure the top two bracket sleeves to wall and hang the radiator to ensure it is level. With the positions correct, mark out the bottom bracket positions.

Using a suitable drill bit and plugs, secure the bottom bracket sleeves to wall and hang the radiator to ensure it is level.

When all sleeves are fixed and level, slot in the radiator, and tighten the grub screws on the side of the brackets so secure.

Tallis Double

There are no fixed bracket positions for the Tallis Double model, however for even weight distribution we suggest placing the brackets close to the collectors and between the top and bottom two elements (please refer to diagram overleaf)

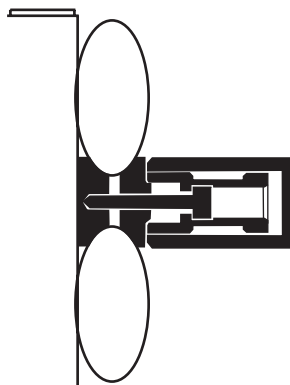

Using the bracket diagram opposite, position the bracket heads between the elements and secure with the supplied screw.

Offer up the radiator to the wall and mark the position on the wall and secure the bracket sleeves to the wall.

Use supplied grub screws to secure the brackets.

We suggest marking and fixing the top two brackets first and then marking the position for the two bottom two brackets.

4. Hang & Commission Radiator

When commissioning your radiator on an indirect/closed system we recommend using a suitable quality and quantity of mixed metal inhibitor to protect against scale & corrosion.

Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

PLEASE NOTE: Systems using micro bore pipe work must have adequate pressure and flow rates for the number and style of radiators on the system.

Technical Specifications

Materials	Steel
Connections	½" flow and return.
Test pressure	6.5 Bar
Testing authority	EN442
Maximum operating pressure	5 Bar
Maximum working temperature	95 °C
Packaging	Wrapped in polythene & boxed.

Guarantees & Liabilities

This product is guaranteed for 5 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer.

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.supplies4heat.co.uk or call us on 01342 306880.