



Tallis Fusion Fitting Instructions

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

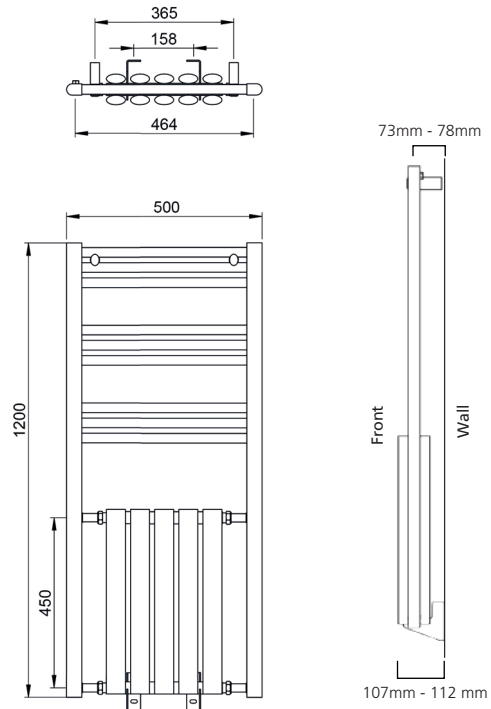

Drawings

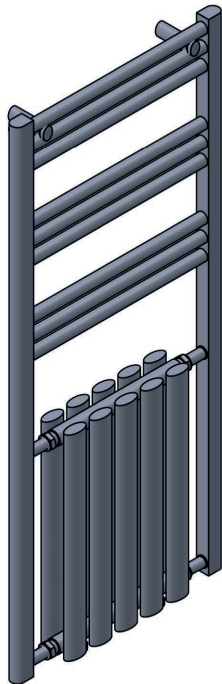

Pipe Centres

Pipe centres left to right	=	width less 36mm
Pipe centres from wall	=	73mm - 78mm
Depth from wall	=	107mm - 112mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

2. Contents

You should have:

- 1 Towel rail
- 2 Brackets
- 2 Hook Brackets

You will need:

- Tape measure
- Electric drill and bits
- Spirit level
- Airvent key
- Appropriate wall fixings
- Spanner for valves and vents

Cleaning:

Steel products can be cleaned using a soft damp cloth with a non abrasive cleaning product.

3. Mark Bracket Position & Fix Brackets

1. Fit top bracket heads to the Towel Rail in the desired position and slide the bracket sleeve on (do not secure with the retaining screw at this stage).
2. Place the Towel Rail against the wall and mark the position of the top bracket sleeves (see drawing 2 overleaf)
3. Remove the Towel Rail and using a bracket sleeve mark the location of the screw holes.
4. Using appropriate drill bits and screws, fix bracket sleeves to the wall (make sure that the locating holes for the retaining screws are accessible) and check they are level.

4. Fix Brackets Continued

5. Hang the Towel Rail by inserting bracket heads into the bracket sleeves and secure with the retaining screws
6. With the towel rail in position place the two bottom bracket hooks one tube in from either end and mark the positions.
7. Remove the towel rail and with the appropriate drill bits and screws, fix bottom hook brackets to the wall. Do not fully tighten at this stage allow a little movement to assist in hanging the rail.
8. Lower the towel rail onto the bottom brackets and fit the top brackets back into the sleeves, tighten all brackets

5. Commission Radiator

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Technical Specifications

Materials	Steel
Connections	½" flow and return.
Test pressure	6.5 Bar
Testing authority	EN442
Maximum operating pressure	5 Bar
Maximum working temperature	95°C
Packaging	Wrapped in Polythene & boxed

PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Guarantees & Liabilities

This product is guaranteed for 10 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer.

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.supplies4heat.co.uk or call us on 01342 306880.