

BEAUFORT slim Fitting Instructions



Steel Radiator

70mm Flat Tube, 35mm Round Collectors

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.



Drawings

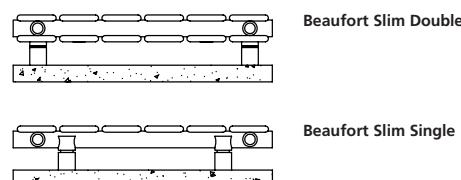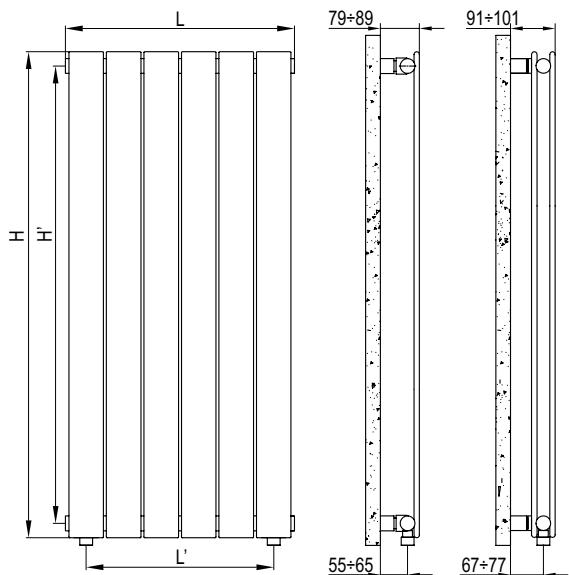

Model	Elem. Nº	H mm	H' mm	H mm	H' mm	L mm	L' mm
Beaufort Slim Single & Double	2	1820	1762	2020	1962	160	76
	3	1820	1762	2020	1962	236	152
	4	1820	1762	2020	1962	312	228
	5	1820	1762	2020	1962	388	304
	6	1820	1762	2020	1962	464	380

		Single	Double
Pipe centres left to right	=	width less 84mm	width less 84mm
Pipe centres from wall	=	55mm-65mm	67mm-77mm
Depth from wall	=	79mm-89mm	79mm-89mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

2. Contents

You should have:

- 1 Radiator
- 4 Wall brackets (3 wall brac. for single 2 elements)
- 4 Wall Plugs (3 wall plugs for single 2 elements)
- 4 Screws (3 wall screws single 2 elements)
- 4 Wall sleeves (3 wall sleeves for single 2 elements)
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

3. Mark Bracket Positions

Beaufort Slim single radiators use clamp style brackets that can be positioned on the collector to suit the installation, although we recommend that they are fitted in the locations suggested in the technical drawings in section 5. Fit Brackets & Hang.

The brackets on double radiators use welded lugs in fixed positions on the cross tubes.

Attach brackets and bracket sleeves to the radiator as shown in Diagrams 1 (single) and 2 (double), place radiator against the wall and mark bracket positions.

Detach the bracket sleeve from the bracket and using a suitable drill bit and fixings secure in position, checking they are level and square.

PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

4. Hang Radiator

With the bracket sleeves firmly fixed and level, the radiator can be hung in position by inserting the brackets into the sleeves and securing with the grub screws provided.

Technical Specifications

Materials	Steel.
Connections	½" flow and return.
Test pressure	5.2 Bar
Maximum operating pressure	4 Bar
Maximum working temperature	As to EN442 Δt 50°C
Packaging	Wrapped in polythene & boxed


PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Guarantees & Liabilities


This product is guaranteed for 10 years. The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

5. Fit Brackets & Hang

• = typical bracket fixing positions for single range

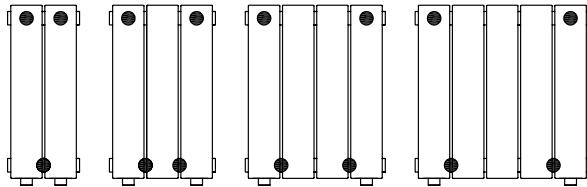

• = bracket fixing positions for double range

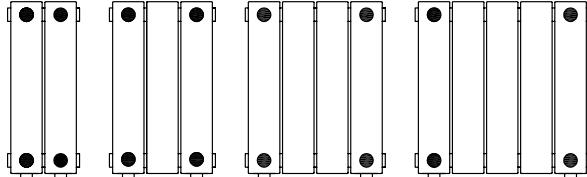

single range

double range




Diagram 1 (single version)


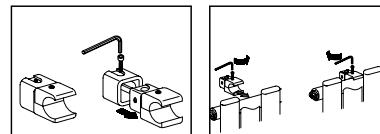


Diagram 2 (double version)

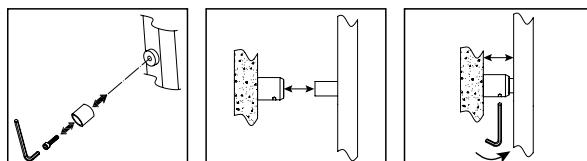

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit supplies4heat.co.uk or call us on 01342 306880.